



# Toolless Plug Adapter Installation Manual

1

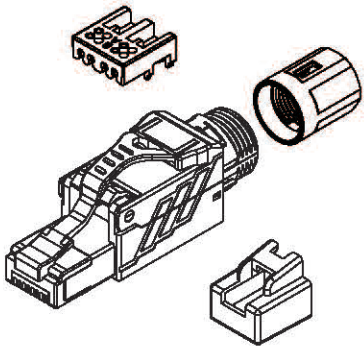


2

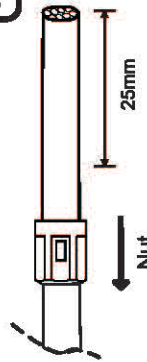


3

Organize the Braided / Drain Wire / Foil for about 10~12mm.

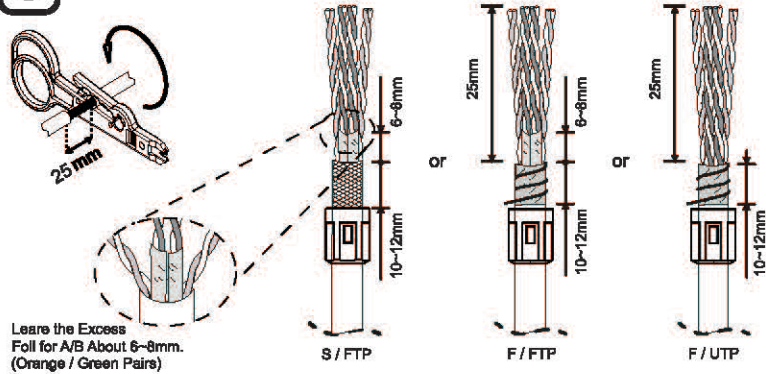


4


Note the Wire Scheme Map & Angle to penetrate A/B Wires.

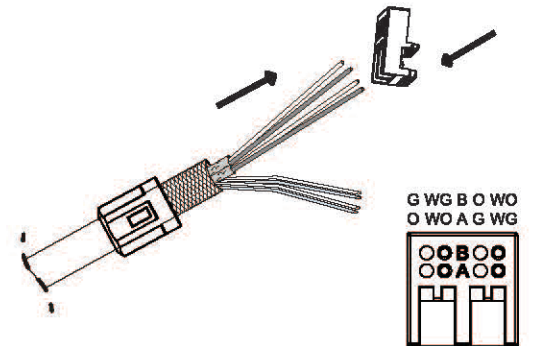

5

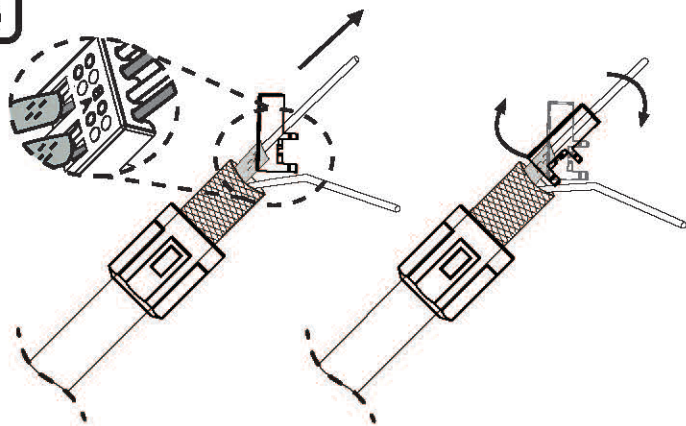


6

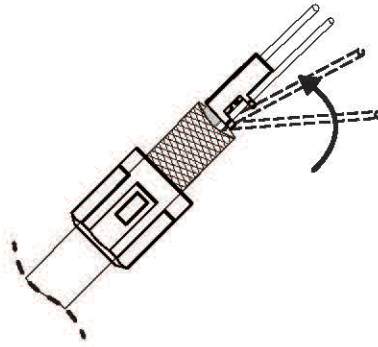


7

Flush front Row Wires.

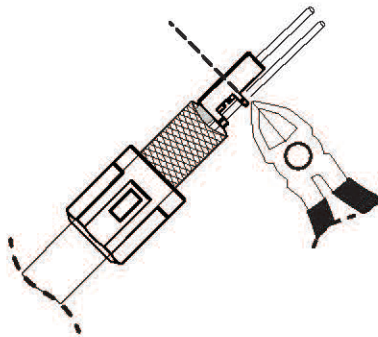


8


Flush front Row Wires.

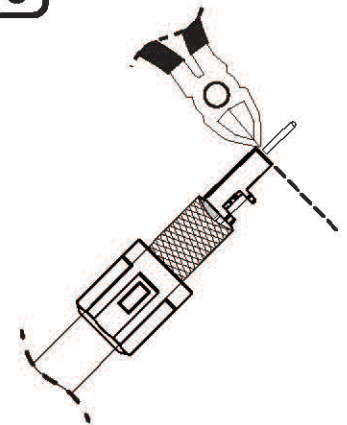


9

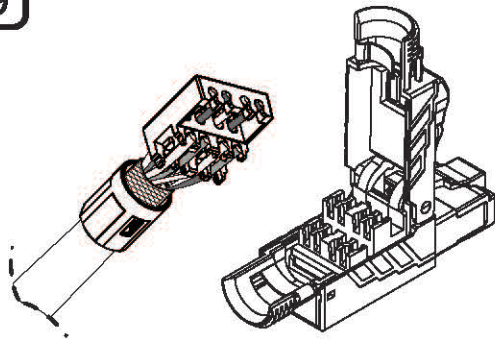

10

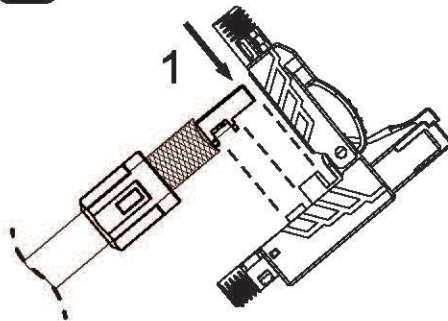

11

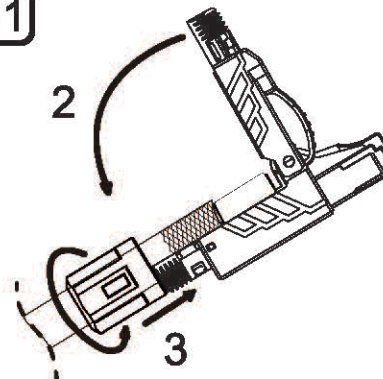

12

